




- Ensure legs are adjusted in line with the base of bath.

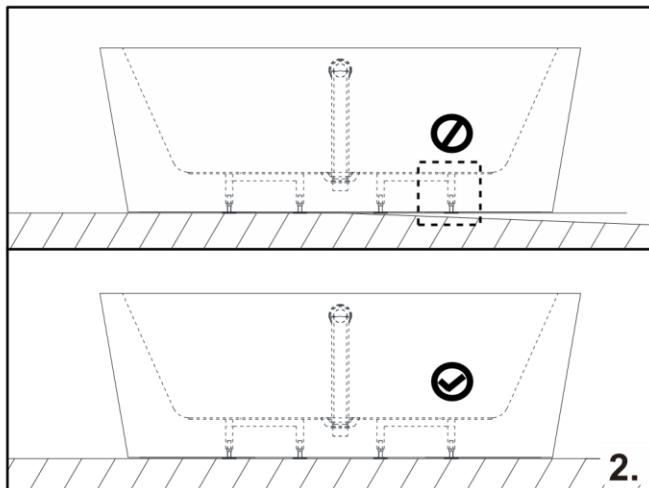


- Check that bath sits flat; if required adjust legs to compensate for floor level.

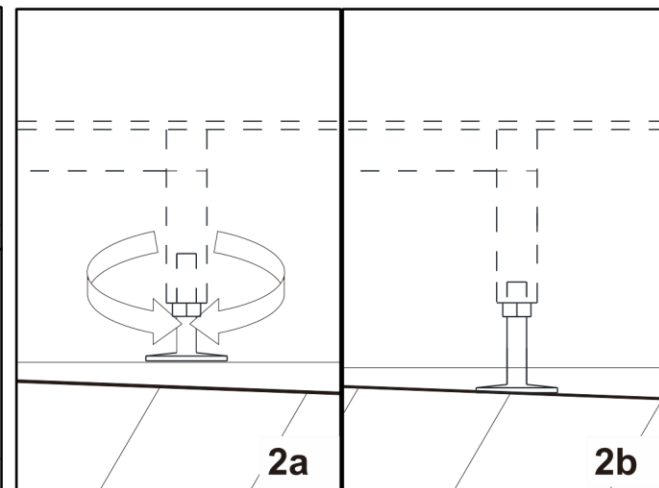


- ⚠ • Before step 3 set waste connection in position.

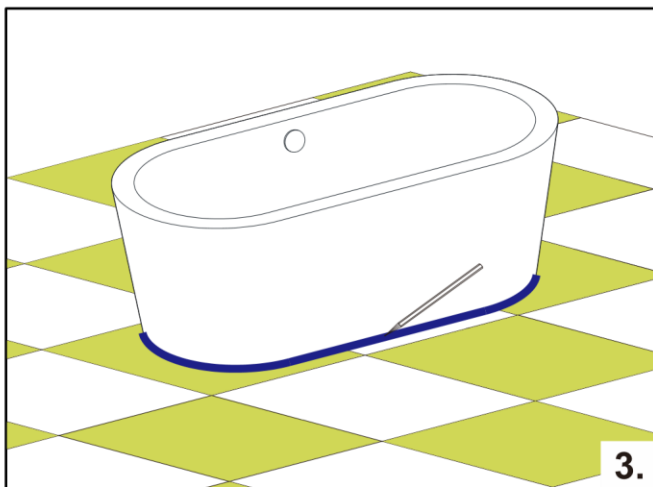

- With pencil trace outline of bath.

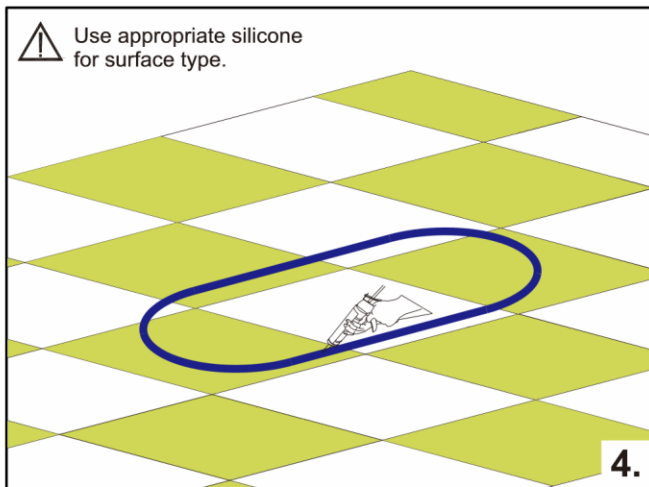

- Apply a thick bead of silicone within bath outline.

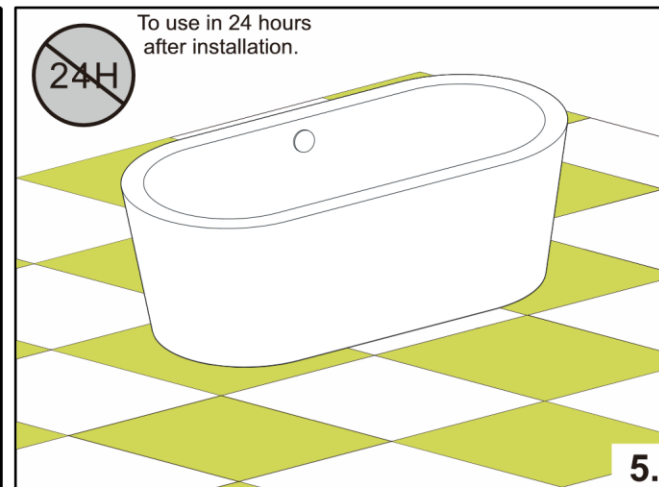


- Set bath in final position.

⚠ This installation guide does not include details of waste connection; final decision about installation of waste connection should be taken by a suitably qualified person.



Suggested Skirted Bath Install Method

Other methods be adopted pending type of installation

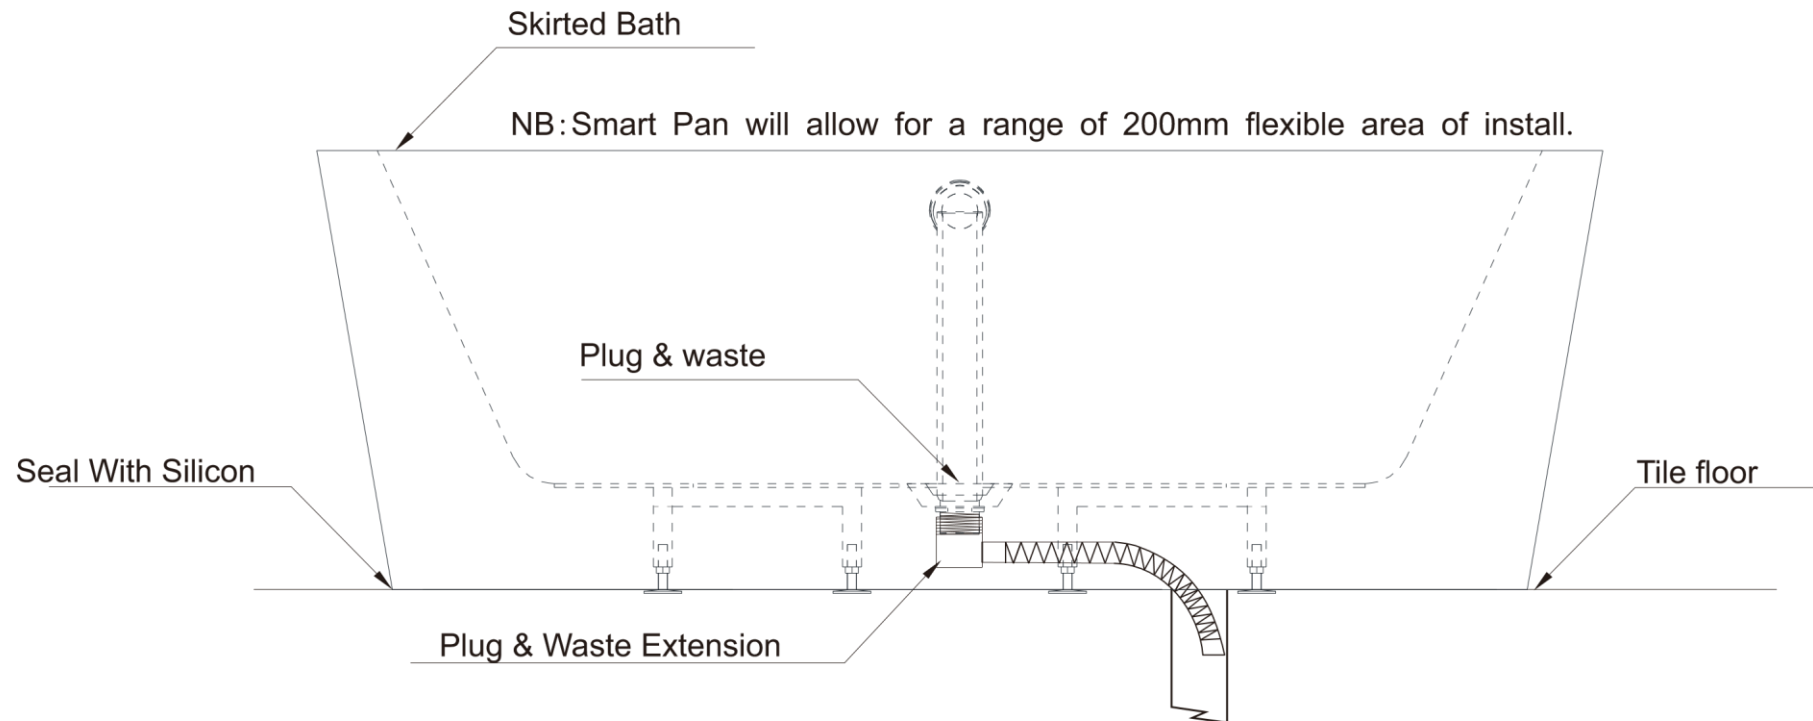

Note: The flex hose need to have angle to ensure the water drain down properly